

# ZoomBoard User's Manual

[Introduction](#)

[Activation](#)

[Typing](#)

[Settings](#)

[Contact Us](#)

## Introduction

ZoomBoard allows quick and accurate typing on Windows Mobile Pocket PC. Typing on this keyboard is as easy as sliding finger on the screen.



## Activation

**If you set up ZoomBoard for the second time, you should make soft reset on your device.**

**If you want to delete ZoomBoard: you need first to switch off Default\_keyboard option > make soft reset > uninstall program.**

Downloadable version of ZoomBoard is fully functional and has to be purchased and activated for further usage after 14-day trial period.

To activate:

- connect your device to Internet+
- tap the on-screen button in the center of the tray where the default Windows Mobile keyboard is, tap the arrow in the tray there choose ZoomBoard, tap 123 button and there in the left upper corner of the keyboard the setting button is. Tap it.
- tap About> Activate> type into the empty field the activation code from the email you received from VITO Technology after purchasing ZoomBoard, choose "I have Internet" and press Activate button below.

In case you can't connect to Internet from your pocket PC, activation will take more time:

 
- tap the on-screen button in the center of the tray where the default Windows Mobile keyboard is, tap the arrow in the tray there choose ZoomBoard, tap 123 button and there in the left upper corner of the keyboard the setting button is. Tap it.
- tap About> Activate> type into the empty field the activation code from the email you received from VITO Technology after purchasing ZoomBoard, choose "I have no Internet" and press Activate button below. Carefully read instructions on the screen. After you've performed the necessary action you will receive an e-mail with the necessary instructions for completing your activation.

*Note: as you can see on-line activation is much easier than the off-line variant, which can take considerably more time. We recommend you on-line activation.*

If you have any questions or problems regarding the activation process, please contact our support at [registr@vitotechnology.com](mailto:registr@vitotechnology.com).

 


## Typing

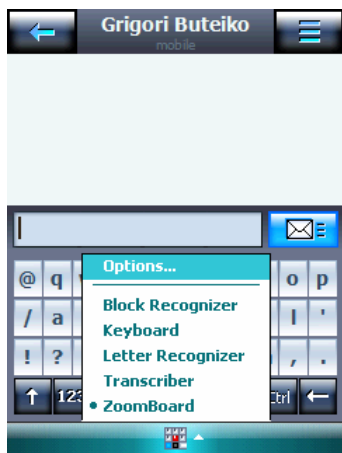

To start typing on ZoomBoard choose it by tapping the on-screen button in the center of the tray where the default Windows Mobile keyboard is. ZoomBoard will appear there as an application for typing.

 
ZoomBoard looks like the usual keyboard but it works differently. There are 3 different types of zooming:

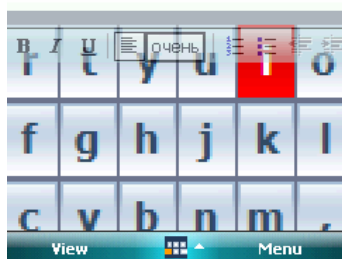

Full zoom zooms in the whole keyboard with letters



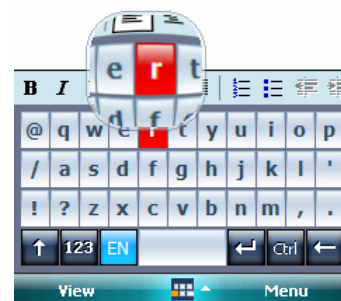

Lens zoom - appears above the keyboard





Float zoom - appears straight above the letter you press


When you tap the keys there appears a zoom (either flat, glass or i) with the zoomed in letters under your finger. The key highlighted with red is ready to type. Slide over the necessary letter until it gets red and release finger to type this letter.

Blue button  in the bottom left changes the layouts. Tap it and change between the layouts you've chosen.

Shift button  (up arrow) changes register. Tap twice to print only Capital letters (to switch to the upper case).

 changes keys with letters to keys with numbers and symbols, access the setting button 

Enter button 

Backspace button  to erase symbols; tap and hold to start quick erasing of the text.

 
 Control button.

*The combinations of keys with Ctrl and Shift are supported.*



## Settings

Tap  to access  setting button.  
The options are the following:

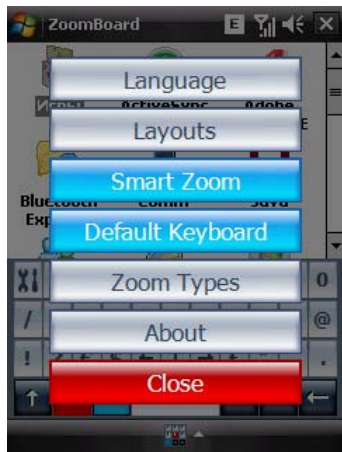

**Language** to change language of settings

**Layouts** to choose the language layout

**Smart Zoom** to switch this option on or off.

When enabling this option it is possible to zoom the pressed letters either immediately or with a delay. If you need a zoom window to emerge right away then you need at first stroke wait for the zoom to appear. After that the zoom will come forward as quickly as you touch the screen. When you do not touch the screen with keyboard for at least three seconds the zoom is going to appear with the delay again.



When disabling it the zoomed preview appears all the time with the same interval.

**Default keyboard** to set ZoomBoard as a default keyboard (If you

want to delete ZoomBoard: you need first to switch off **Default\_keyboard option > make soft reset > uninstall program.**)

**Zoom types** to switch between full zoom, lens zoom, float zoom or simple (without appearance of any zoom).

**About** to access the info about the version and register info.

## Contact Us

If you have any questions, comments or suggestions on ZoomBoard, please email us at [support@vitotechnology.com](mailto:support@vitotechnology.com).

